

Epson LX-350 Menu Setting Changes

To change the Default (out of box) settings:

1. Make sure paper is loaded and the printer is ON.

Press and hold the **Menu (LF/FF and Load/Eject)** buttons until the printer beeps once.

2. The language which is underlined (English) indicates the current setting. Press the **Set (Load/Eject)** button to select the English language.
3. The printer prints a message asking if you wish to print all of the current settings. Bypass printing of the current settings by pressing the **Item ↑** button or the **Item ↓** button.

The printer prints the first menu item (**Page length for tractor**).

4. Press the **Set (Load/Eject)** button 8 times (**5.5 inch**).
5. Press the **Item ↓** button twice (**Auto tear off**).
6. Press the **Set (Load/Eject)** button once (**On**).
7. Press the **Item ↓** button 5 times (**I/F Mode**).
8. Press the **Set (Load/Eject)** button twice (**Serial**).
9. Press the **Item ↓** button twice (**Baud rate**).
10. Press the **Set (Load/Eject)** button once (**9600BPS**).
11. Press and hold the **Menu (LF/FF and Load/Eject)** buttons until the printer beeps once to save changes.